# ACR-B040/ACR-B080 TELEPHONE RECORDING SYSTEM

# USER'S MANUAL

#### ACR-B040/ACR-B080 TELEPHONE RECORDING SYSTEM

# **User's Manual**

© Yosin Electronics 6F-2, No.348, Sec.6, Nanjing E. Rd.,• Neihu Dist. Taipei City 11470 Phone +886-2-27913911 Email sales@yosin.com.tw

# **Table of Contents**

CHAPTER 1	
OVERVIEW	1
Front Panel	1
Rear Panel	2
Before You Start	3
CHAPTER 2	
OPERATING INSTRUCTIONS	4
LOGIN	4
Channel Status	5
Download Software	7
Query by Time	8
Query by Channel	10
Advanced Query	11
RECORDING PARAMETERS SETTINGS	12
System Time Setting	13
USER ACCOUNTS	14
Appendix 1	
XZDC NETWORK INQUIRY	15
Introduction	15
Installation	16
Download Software	19
ADD DEVICE	20
Recording Path	21
Advanced Query	22
ACCOUNT MANAGEMENT	23

# **Overview**

# **Front Panel**

The front panel contains various status LEDs that indicates system activities / faults.



- POWER
  - Power LED.
- ACT
  - Solid Bright LAN connected / Dark LAN not connected / Blink Transferring Data
- 100M
  - Solid Bright 100Mbps LAN connected / Dark 10Mbps or No LAN connected
- LED 1-4(ACR-B040) / LED 1-8(ACR-B080)
  - Solid Bright The channel is occupied / Blink The channel is un-occupied

# **Rear Panel**

The rear panel contains registered jacks as telephone / LAN interfaces.



#### ■ DC12V

Power jack for connecting bundled adaptor.

■ Jack 1-4(ACR-B040) / Jack 1-8(ACR-B080)
RJ-11 jacks for analog telephone line connections.

#### LAN

RJ-45 jack for LAN / PC connection.

# **Before You Start**

The factory default IP of ACR-B040/ACR-B080 is "192.168.0.190". If your LAN was on a different network segment (e.g. 192.168.1.XX), you have to change the IP first. Please connect ACR-B040/ACR-B080 to a PC on the same network segment, and log in to it by Internet Explorer to change the default IP.

# **Operating Instructions**


# **Login**

Run Internet Explorer, type in system IP to access the telephone recording system. The default Username is  $\underline{\text{admin}}$ , and the default Password is  $\underline{\text{admin}}$ . Please set your desktop resolution as 1280 \* 768 for the best result.




# **Channel Status**

The system will show current channel status after you log in successfully.

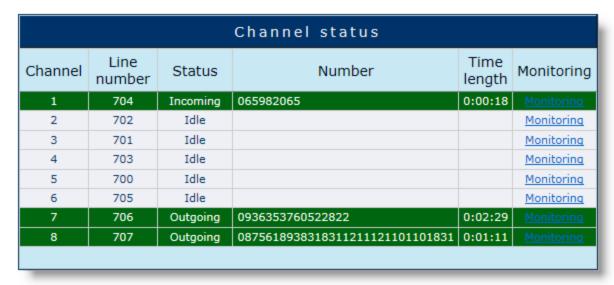

Click "Monitoring" to start real-time monitoring the call.

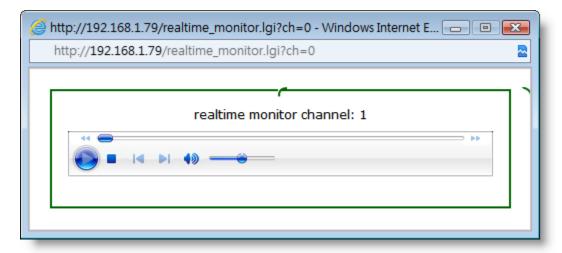

# **IP** Adress Setting

Here you can change IP address related settings. Please contact your IT staff if you need more help.




# **Download Software**

You can download G.729 decoder and Firefox browser here. Your PC has to have G.729 decoder installed in order to play recordings thru the web.



# **Query by Time**

Here you can query the recordings by designating the time.

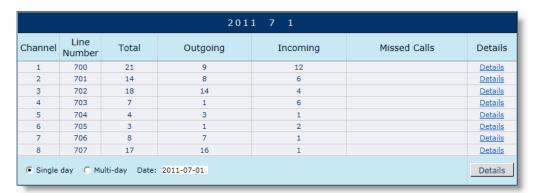


#### Single day

Querying recordings of a specific day.


#### ACT

Querying recordings of a specific range of days.

Click "Details" to see the result.

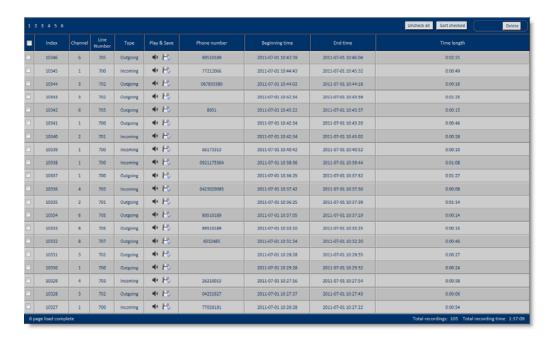

Move the cursor to the recording and click • to play.

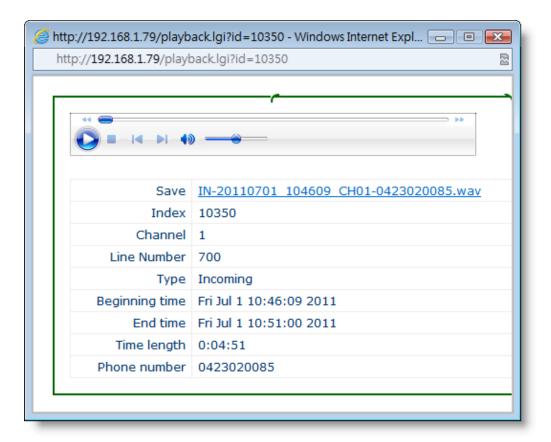

# **Query by Channel**

Here you can query the recordings by designating the channel.

Query by channel							
Channel	Line Number	Total	Outgoing	Incoming	Missed Calls	Details	
1	700	1991	632	1359	392	<u>Details</u>	
2	701	1436	544	892	393	<u>Details</u>	
3	702	1281	806	475	391	<u>Details</u>	
4	703	1051	447	604	393	<u>Details</u>	
5	704	943	495	448	391	<u>Details</u>	
6	705	915	483	432	391	<u>Details</u>	
7	706	1140	707	433	392	<u>Details</u>	
8	707	1596	1164	432	392	<u>Details</u>	

Click "Details" to see the result.

# **Advanced Query**

Advanced Query provides more advanced options for querying recordings.



Click "Query" to see the result.

# **Recording Parameters Settings**

You can configure the recording parameters here.

Recording parameter settings						
Name	Value	Default	About			
Min. recording time length(second)	5	5	Auto delete if the recording time is less than this			
Max. recording time length(second)	4:00:00	4:00:00	up to 99 hours			
Outgoing number identification delay time (second)	7	7	4 - 20 seconds			
Incoming number prefix						
Outgoing number prefix						
Voice encoding	g729 ▼	g729				
Disk full strategy	Loop record ▼	Loop recording				
Start recording when	Hook off ▼	Hook off				
Caller ID type	Auto	Auto				
			Setup			

#### ■ Min. recording time length

Only record calls that exceeds the designated length.

#### ■ Max. recording time length

The max. length of the recordings.

#### Outgoing number identification delay time

The delay time for identifying outgoing numbers.

#### ■ Incoming number prefix

Country/Area code filter for incoming numbers.

#### Outgoing number prefix

Country/Area code filter for outgoing numbers.

#### Voice encoding

Select G.729 (recommended) or MP3 encoding.

#### Disk full strategy

Select Loop (recommended) or Stop when disk is full.

#### Start recording when

Select to start recording by Ring or Hook off.

#### Call ID type

Auto/FSK/DTMF

Click "Setup" to save the configuration.

# **System Time Setting**

You can configure the system time here.



## ■ Last sync. Time

The last sync. time. with your desktop.

#### Manual

Setup current time manually.


# **User Accounts**

You modify user authority/password in this page.




#### Change Password

Change user password.

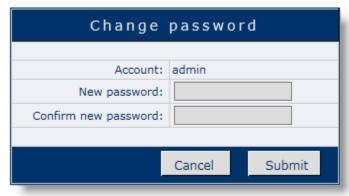

#### ■ Create Account

Create new user account.

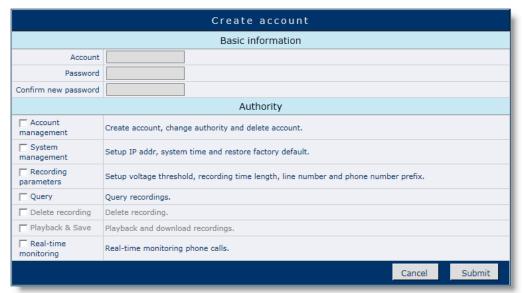

# Appendix


# **XZDC Network Inquiry**

# **Introduction**

XZDC is a standalone client of ACR-B040/ACR-B080, which enables users to control the unit or inquiry recordings over LAN. It can also backup the recordings on ACR-B040/ACR-B080 automatically. With Loop Recording feature enabled, you'll almost have unlimited space for recording.

# **Installation**

To install XZDC, please simply copy XZDC folder from the bundled CD to "D:\" first.

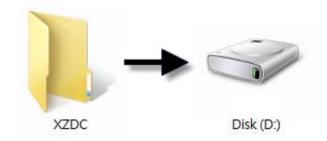

\* Please exit/shut down Skype service before you run XZDC.

Run D:\XZDC\XZDC.exe and the XZDC icon will be shown on the System Tray. XZDC will start automatically with your Windows.



## Run XZDC

Right-click on XZDC icon, select "Show" to visit the login page.




Enter Account name and Password to login. Default: admin / admin.




You can see the current version info after you login successfully.



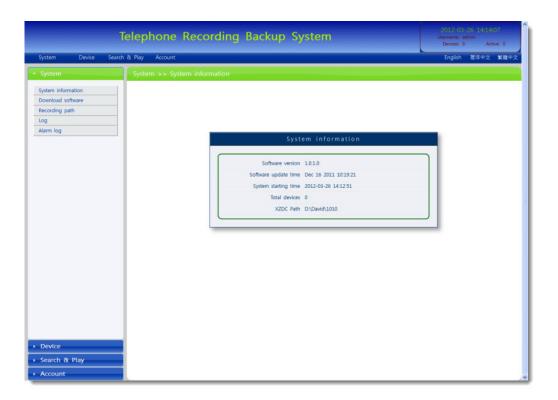


# **Download Software**

You can download the required G.729 decoder here.

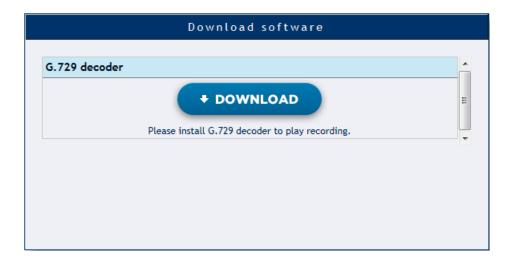

# **Add Device**

You can add device by entering required IP Address, Port, Account name and Password here. Click "Submit" to add the device to the device list.

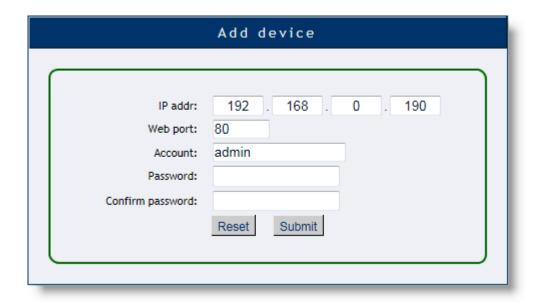

Click "Device Manager" to see the device list.



Click "Device Status" or IP address to see the status of the selected device.




# **Recording Path**

Click "Recording Path" to see the current recording path.



Click "Add Path" to add new recording path.

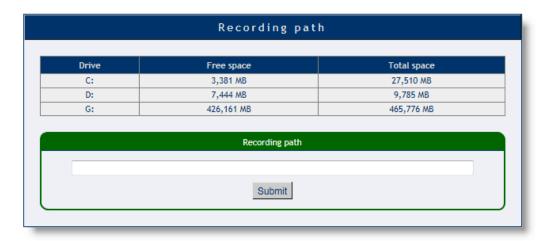

The system will download un-backed up recordings to the assigned path every time when system starts after you submit the recording path.

The system naming rules are as below:


- Folder Name
  [/XZDC\_Record/N/YYYY/MM/DD] N=Device ID, YYYY=Year,
  MM=Month, DD=Day.
- File Name
  [OUT-YYYYMMDD\_HHNNSS\_DEVX\_CHXX-NNNN.wav] —
  OUT=Outgoing, YYYYMMDD=Year/Month/Day, DEVX=Device ID,
  CHXX=Channel ID, NNNN=Outgoing or Incoming No..

# **Advanced Query**

Click "Advanced Query" to search recordings by conditions.



Select your device.

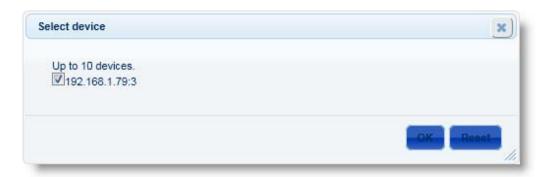

Click "Query" to query the recordings by conditions.



If you select "Today" as the time range but there is no data shown on the screen, you may have to wait until the system finish the backup.

# **Account Management**

Click "Account Management" to manage the accounts.



The "Change Password" screen.



Click "New" to create a new account. You can assign the authority here.

